



Automatic Light Control



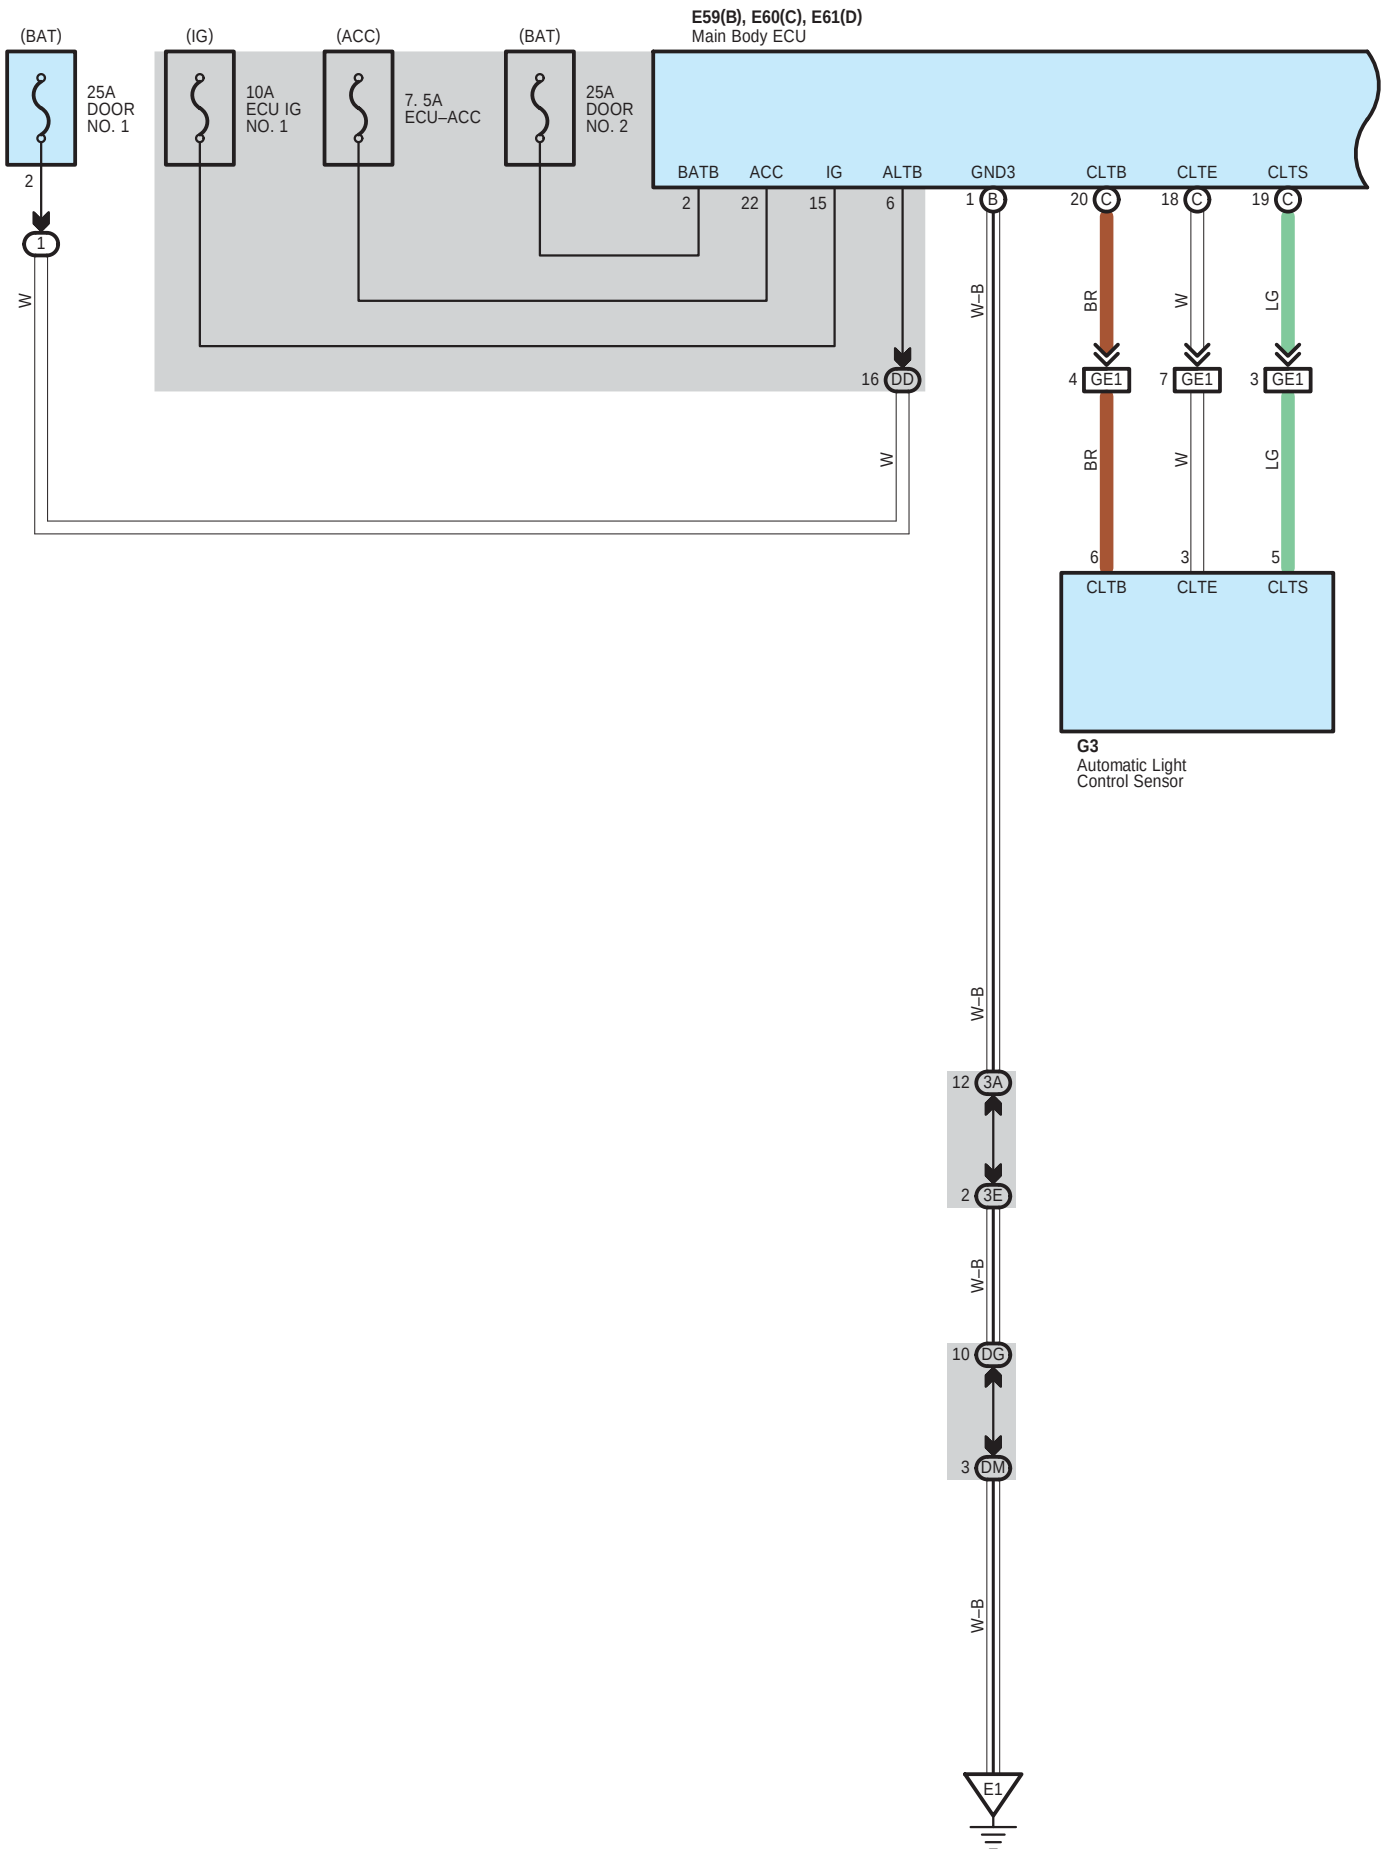


E59(B), E60(C), E61(D)
Main Body ECU

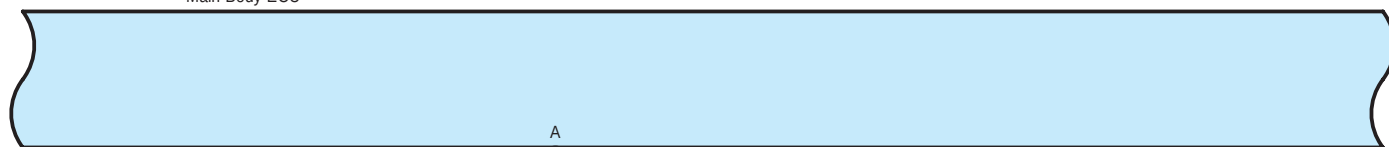


E27
Headlamp Dimmer SW
Assembly

		EL	T	H	A
Light Control SW	OFF				
	Tail	☐	☐		
	Head	☐	☐	☐	
	AUTO	☐			☐

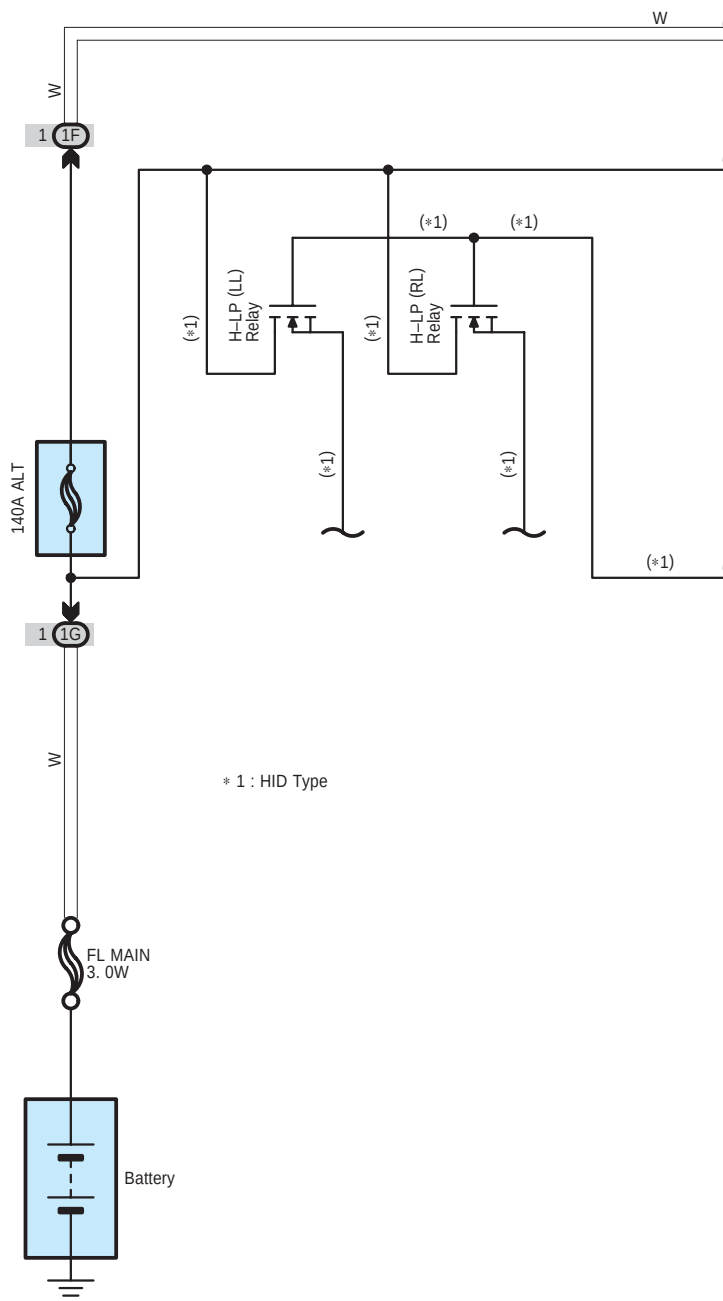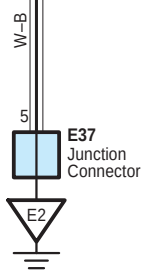

* 1 : HID Type



System Outline

Automatic Light Control Operation

The automatic light control system works when the light control SW is turned to AUTO. The automatic light control sensor detects the brightness around the vehicle. By this function, the system automatically turns the tail lamp and headlamp on if the brightness is below the regular level and turns the tail lamp and headlamp off when the surroundings become brighter than the regular level.

: Parts Location

Code	See Page	Code	See Page	Code	See Page
E27	58	E59	B	59	E61 D 59
E37	58	E60	C	59	G3 61

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1F	22	
1G		
3A	36	Instrument Panel Wire and J/B No.3 (Instrument Panel Left)
3C		
3E		
3P		
3Q		
DA	30	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
DD		
DF	30	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
DG	31	
DM	30	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
GE1	69	Instrument Panel No.3 Wire and Instrument Panel Wire (Instrument Panel Center)

: Ground Points

Code	See Page	Ground Points Location
E1	69	Left Side of the Instrument Panel Reinforcement
E2	69	Instrument Panel Brace LH